



# FREESPOT 安裝指南

35020514-04

2021.09



## 行動裝置

### iOS

- 開啟 [設定]，然後點擊 [Wi-Fi]。



- 選取「'freespot'= Security Password (AES)」。




- 輸入密碼「freespot」，然後點擊 [加入]。



一旦成功連線至 FREESPOT 時，註冊頁面會自動開啟。

### Android

- 開啟 [設定]，然後點擊 [Wi-Fi]。

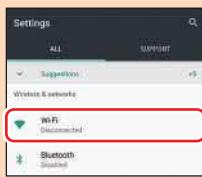

- 選取「'freespot'= Security Password (AES)」。



- 輸入密碼「freespot」，然後點擊 [加入]。



- 點擊下面的通知 (如有顯示)。




註冊頁面將自動開啟。

### Windows 10/8.1

 - 按一下工作列上的 Wi-Fi 圖示。



- 選取「'freespot'= Security Password (AES)」並按一下 [連線]。



- 輸入「freespot」作為網路安全金鑰並按一下 [下一步]。若出現網路位置精靈，按一下 [否]。



一旦成功連線至 FREESPOT 時，註冊頁面會自動開啟。

### 電腦

### Windows 7

- 按一下工作列上的 Wi-Fi 圖示。



- 選取「'freespot'= Security Password (AES)」並按一下 [連線]。



- 輸入「freespot」作為安全金鑰並按一下 [確定]。若出現網路位置精靈，按一下 [否]。



- 一旦成功連線至 FREESPOT 時，註冊頁面會自動開啟。

### macOS

- 按一下功能表列上的 Wi-Fi 圖示。



- 選取「'freespot'= Security Password (AES)」。



- 輸入密碼「freespot」，然後點擊 [加入]。



一旦成功連線至 FREESPOT 時，註冊頁面會自動開啟。

依照下列步驟將您的裝置註冊到 FREESPOT。



# 註冊您的裝置

成功連線至 FREESPORT 並開啟註冊頁面之後，請依照下列步驟註冊您的裝置。

- 1 請按照畫面所顯示的指示操作。閱讀顯示的使用條款後，選取「同意」。若「感謝您使用 FREESPORT。」畫面並未出現，請存取 URL。

如果使用 Android 裝置，請啟用裝置的飛航模式來訪問以下 URL。



<http://www.freespot.com/>

FREESPORT Service Terms of Use

1. Purpose

The "FREESPORT Service" means the services provided by service providers at various facilities (hotels, public facilities, restaurants and others) ("Service Providers"), whereby free Internet access via wireless LAN is made available to visitors at such facilities. The purpose of the "FREESPORT Service" is to provide users with the "Terms of Use" is for the FREESPORT Association to set forth necessary matters for users ("User") to use, and the device which utilizes the terminal authentication functions provided by the FREESPORT Association. Although the "FREESPORT Service" is provided by the FREESPORT Association to the FREESPORT Service, these terms of use shall also apply to such services, so long as the device terminal authentication functions provided by the FREESPORT Association are being utilized thereon.

2. Conditions for Use

To use the FREESPORT Service, a registered User must agree to all of the conditions set forth in these Terms of Use. If User commences use of the FREESPORT Service, User is considered to have agreed to all of the conditions set forth in these Terms of Use, as of such commencement of use. It should be noted that some services, such as the device terminal authentication functions provided by the FREESPORT Association are being utilized thereon.

Agree with terms of use?  Agree  Disagree

## A 使用您的電子郵件地址註冊

- 2 選取「電子郵件帳戶」並輸入可立即收到電子郵件的電子郵件地址。

Authentication Method

Email Account  SNS Account Authentication  Guest Account (Accessible for 10 minutes)

If you don't have an email address to receive emails now, you cannot use "Email Account". Select "SNS Account Authentication" or "Guest Account" instead.

Email Address

Enter an email address that can receive emails immediately, such as your mobile device's email address. After you have received the email, follow instructions in the email to complete your registration.

Submit

- 3 您將會收到一封電子郵件。請按照電子郵件中的指示操作。

- 4 在程序完成並成功登入 FREESPORT 後，即可存取網際網路。

如果您的裝置已啟用飛航模式以將裝置註冊到 FREESPORT，請立即停用該模式。

## B 使用您的 SNS 帳戶註冊

若無法使用這個方法，請改而使用程序 A 來註冊。

- 2 選取「SNS 帳戶驗證」並選取您使用的 SNS。

透過 Wi-Fi 連線將裝置連線至 FREESPORT 之後，無法從自動開啟的註冊頁面使用您的 Google 帳戶登入 FREESPORT。如果正在使用您的 Google 帳戶，請關閉自動開啟的註冊頁面。\*然後，在 Safari 或 Chrome 等網路瀏覽器上開啟上述 URL 的註冊頁面並完成登入程序。

\*如果使用 iOS 裝置，請點選 [取消] 關閉自動開啟的註冊頁面，然後從顯示的功能表中點選 [不使用 Internet]。如果您在沒有點選 [取消] 的情況下關閉註冊頁面，則 Wi-Fi 將中斷連線。在這種情況下，請將您的裝置重新連線至 FREESPORT 並再試一次。

Authentication Method

Email Account  SNS Account Authentication  Guest Account (accessible for 10 minutes)

If you don't have an email address to receive emails now, you cannot use "Email Account". Select "SNS Account Authentication" or "Guest Account" instead.

You cannot sign in to FREESPORT using your Google account from the registration page that is automatically launched after connecting your device to FREESPORT from a Wi-Fi connection. If using your Google account, close the registration page that is automatically launched. \*Then, open the registration page on a web browser such as Safari or Chrome by accessing "<http://www.freespot.com/>" and complete the sign-in process.\*

\*If using an iOS device, tap Cancel to close the registration page that is automatically launched, then tap Use Wi-Fi to connect to FREESPORT. If you close the registration without tapping Cancel, the Wi-Fi connection will disconnect. In such case, please reconnect your device to FREESPORT and try again.\*If using an Android device, enable airplane mode on your device to access "<http://www.freespot.com/>". Disable airplane mode after you finish signing in.

Sign in with Google

Sign in with Twitter

ログイン

- 3 按照畫面上的指示並登入 SNS。

- 4 在程序完成並成功登入 FREESPORT 後，即可存取網際網路。

如果您的裝置已啟用飛航模式以將裝置註冊到 FREESPORT，請立即停用該模式。

## 連續使用

使用電子郵件或登入 SNS 來登入 FREESPORT 之後，您所註冊的裝置就可以存取網際網路，除非登入過期否則不需要額外進行註冊。

### 登入會維持 6 個月有效。

若自從您上次存取後已過了 6 個月而登入到期，請再次以上述程序註冊。

Nintendo Switch™ 和 Nintendo 3DS 系列裝置不需要設定。

這些裝置不需要註冊即可自動連線至 FREESPORT 並存取網際網路。某些 FREESPORT 集線器可能需要先註冊才可使用。

Nintendo Switch 和 Nintendo 3DS 是 Nintendo 的註冊商標。